


INSTALLATION GUIDE

WPC Wall Panel

Oakling Shiplap Composite Cladding

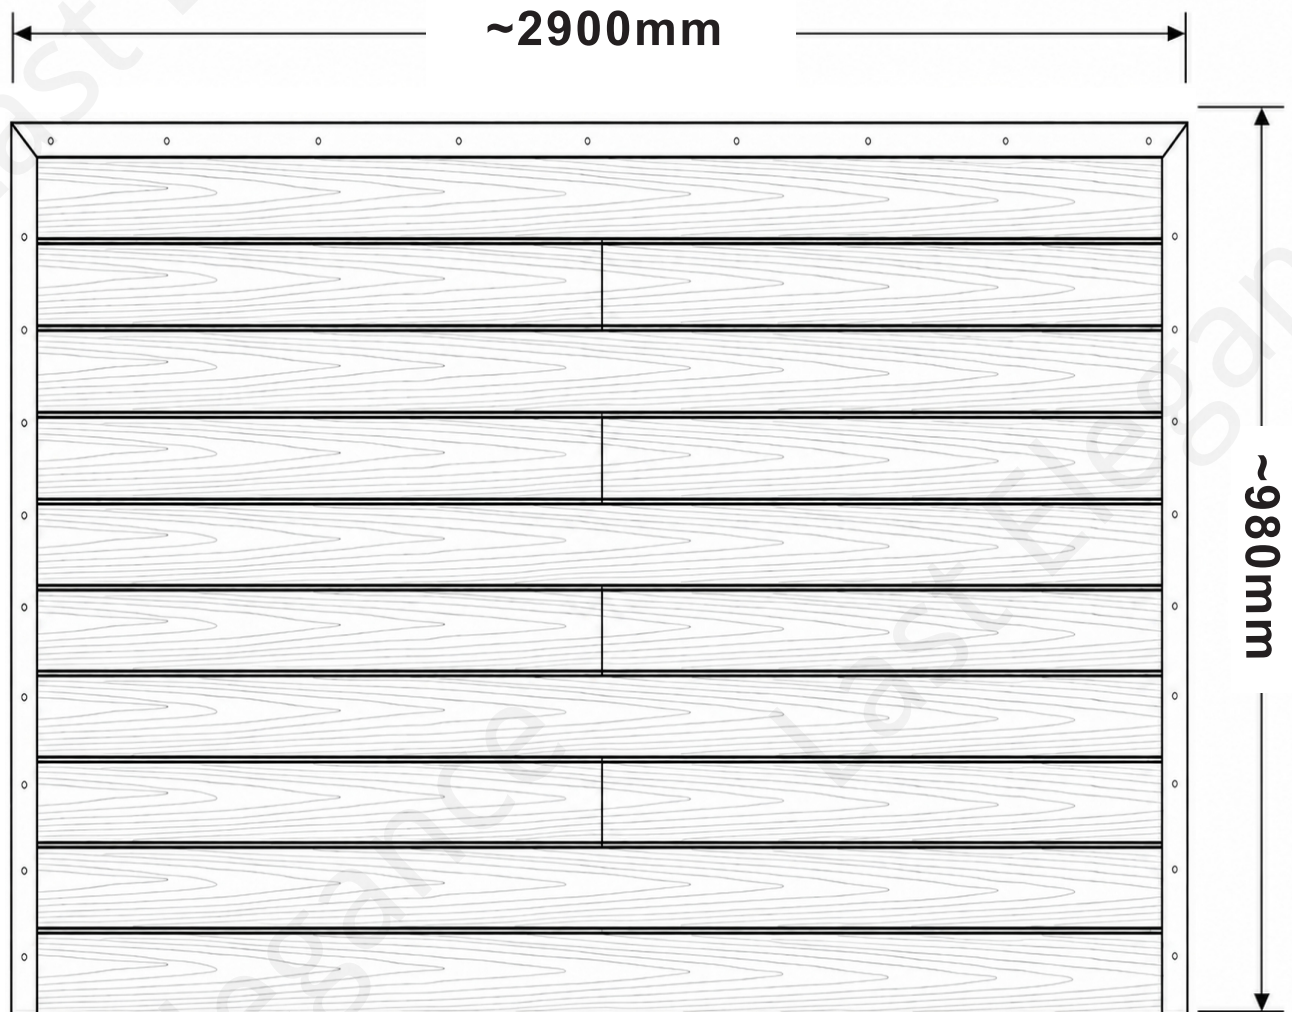



中文

警告！

在安装塑木墙板过程中，板材或面板可能会坠落，导致严重甚至致命的人身伤害。为防止板材坠落，请务必使用随附提供的固定配件进行墙/地面支撑。

用于固定的螺钉与膨胀螺塞需另外购买，请使用适合您墙体或地面的螺钉和膨胀螺塞。如果不确定，请寻求专业意见。请仔细阅读并遵循安装说明的每个步骤。

English

WARNING!

During the installation of WPC siding, boards or panels may fall, causing serious or even fatal injury. To prevent boards from falling, be sure to use the included fasteners to secure them to the wall or floor.

Screws and expansion anchors for fastening must be purchased separately. Please use screws and expansion anchors suitable for your wall or floor. If you are unsure, seek professional advice. Please read and follow each step of the installation instructions carefully.

Русский

ВНИМАНИЕ!

В процессе монтажа стеновых панелей из ДПК панели или облицовочные элементы могут упасть, что может привести к серьезным травмам или смертельному исходу. Во избежание падения панелей обязательно используйте входящие в комплект крепежные элементы для надёжной фиксации к стене или полу.







Винты и дюбели для крепления приобретаются отдельно. Используйте винты и дюбели, подходящие для вашей стены и ли пола. Если вы не уверены, обратитесь за консультацией к специалисту. Внимательно прочтите и следуйте каждому шагу инструкции по установке.

ภาษาไทย

คำเตือน!


ระหว่างการติดตั้งแผ่นผนังไม้พลาสติกแผ่นวัสดุหรือแผงอาจหล่นลงมาซึ่งอาจทำให้เกิดการบาดเจ็บร้ายแรงหรือถึงแก่ชีวิตได้ เพื่อป้องกันแผ่นวัสดุหล่นโปรดใช้อุปกรณ์ยึดที่ให้มาด้วยเพื่อรองรับและยึดกับผนัง/พื้นอย่างแน่นหนา

สกรูและพุกยึดจำหน่ายแยกต่างหาก กรุณาเลือกใช้สกรูและพุกที่เหมาะสมกับประเภทของผนังหรือพื้นของท่าน หากไม่แน่ใจ ควรปรึกษาผู้เชี่ยวชาญก่อนทำการติดตั้งโปรดอ่านและปฏิบัติตามขั้นตอนในคู่มือการติดตั้งอย่างละเอียดทุกขั้นตอน

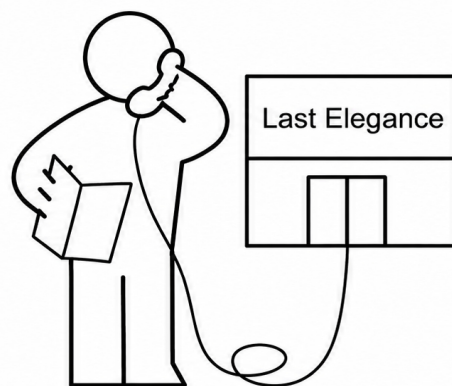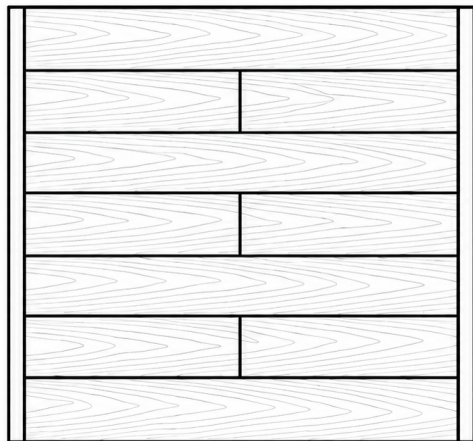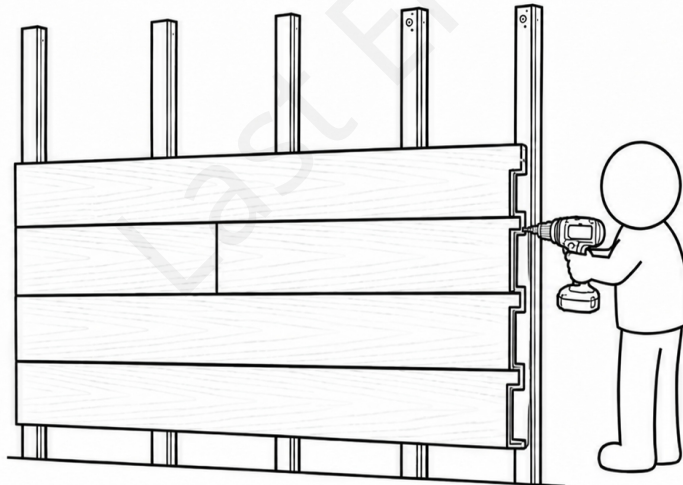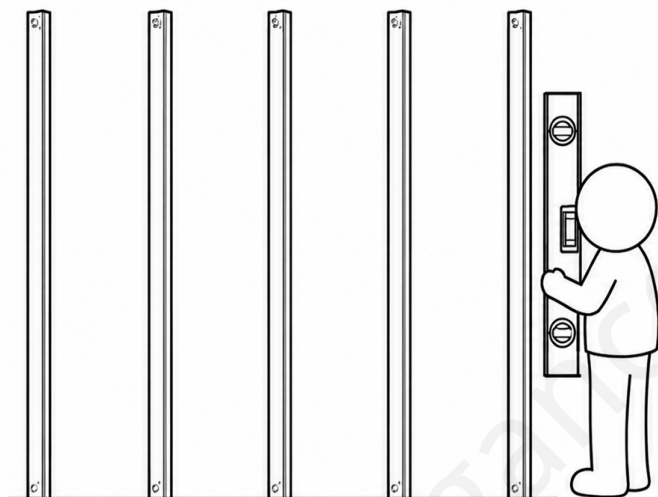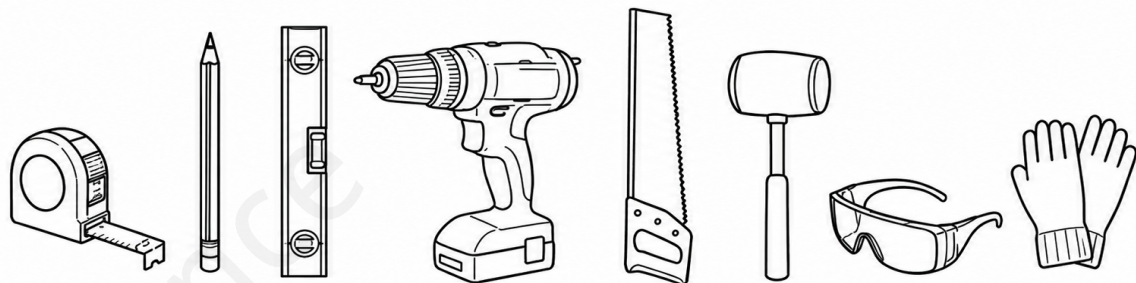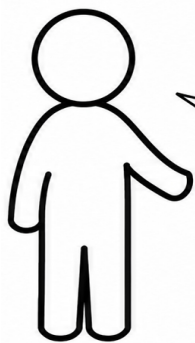


HORIZONTAL INSTALLATION — PARTS

01 WPC Wall Panel
10021

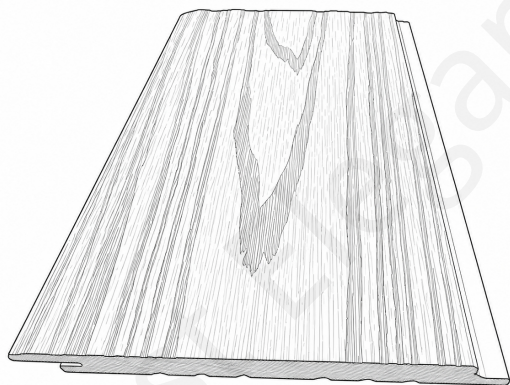


9x

02 Htype clip with thorn
10022

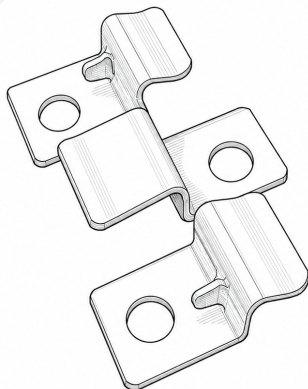

95x

03 Joist
10023

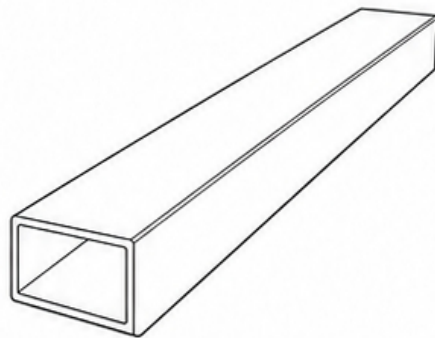


10x

04 Expansion bolt
10111



33x

05 Self-tapping screw
10024




85x

06 Self-tapping screw
10025



95x

07 Edge Trim
10026

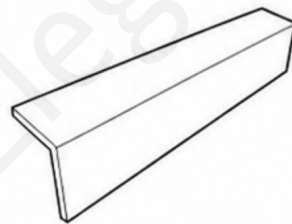


4x

08 Electric drill
10027




1x

09 Spirit level
10028

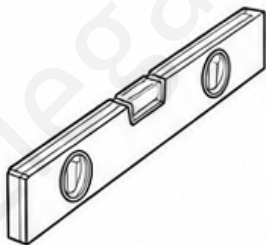

1x

10 Tape measure
10029

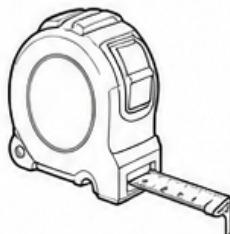

1x

11 Rubber mallet
10030



1x

12 Cutting machine
10031



1x



NOTE


Quantities are for reference only.
Actual usage may vary depending
on project size and layout.




TOOLS NEEDED

Ensure all tools are in good working
condition before installation.

STEP 1

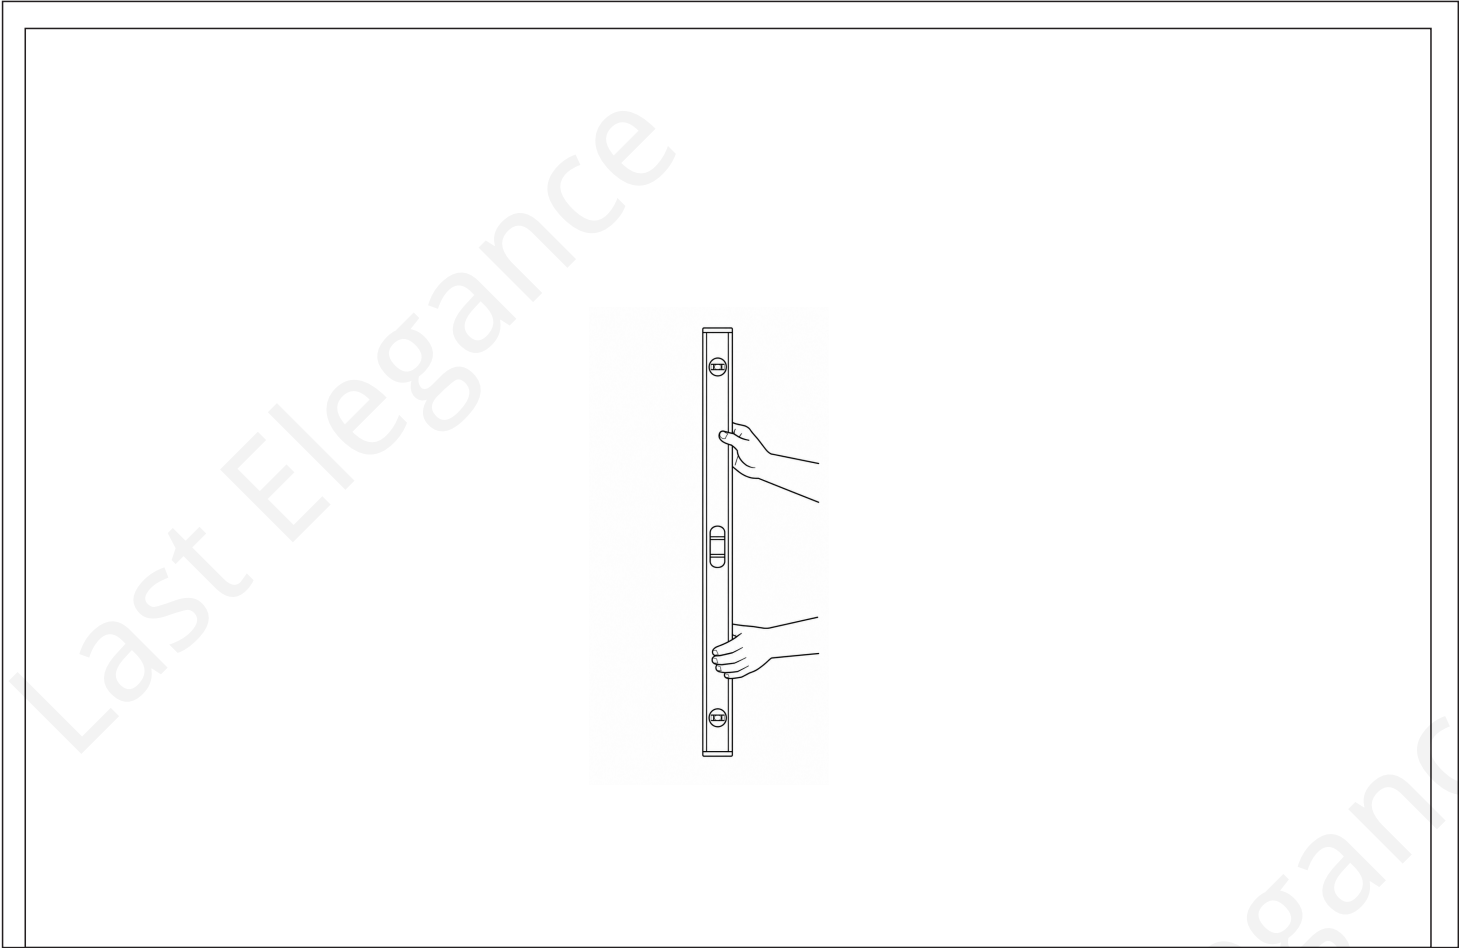

STEP 2





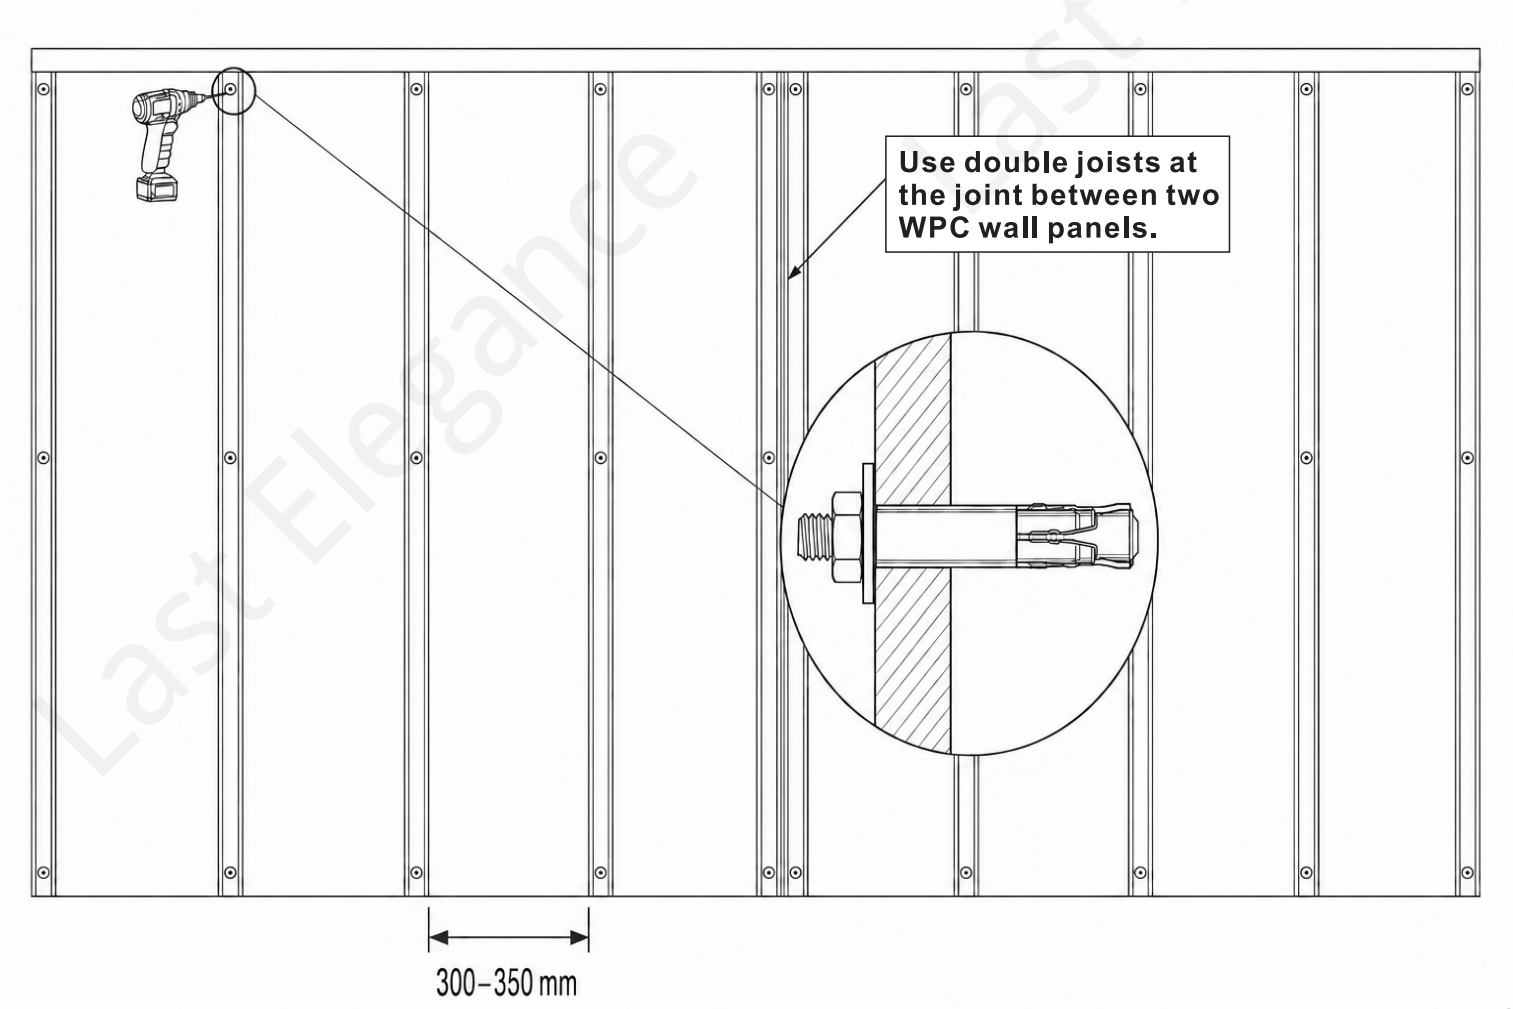


STEP 3 — CUT & FIX THE BOTTOM PANEL




CUTTING



If boards need to be cut to size, ensure the boards are installed and secured immediately after cutting.

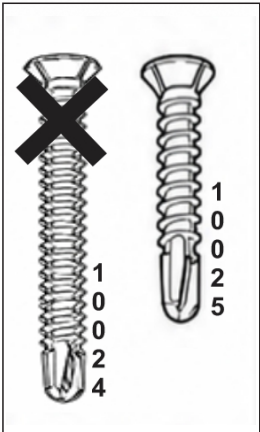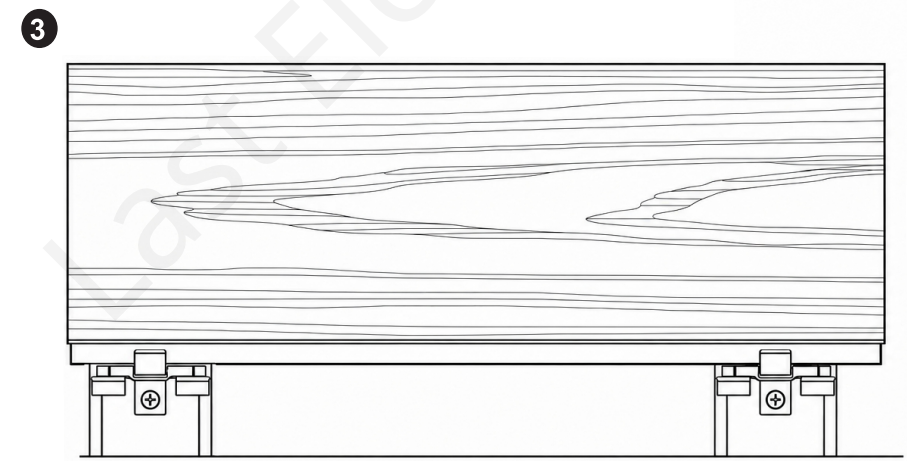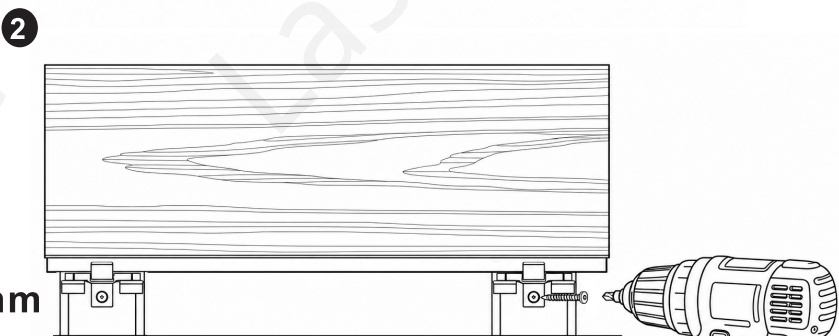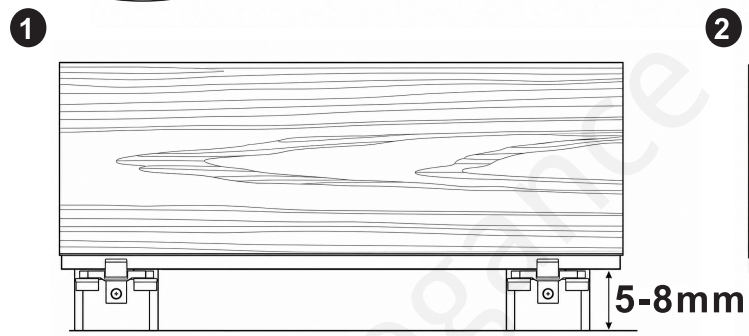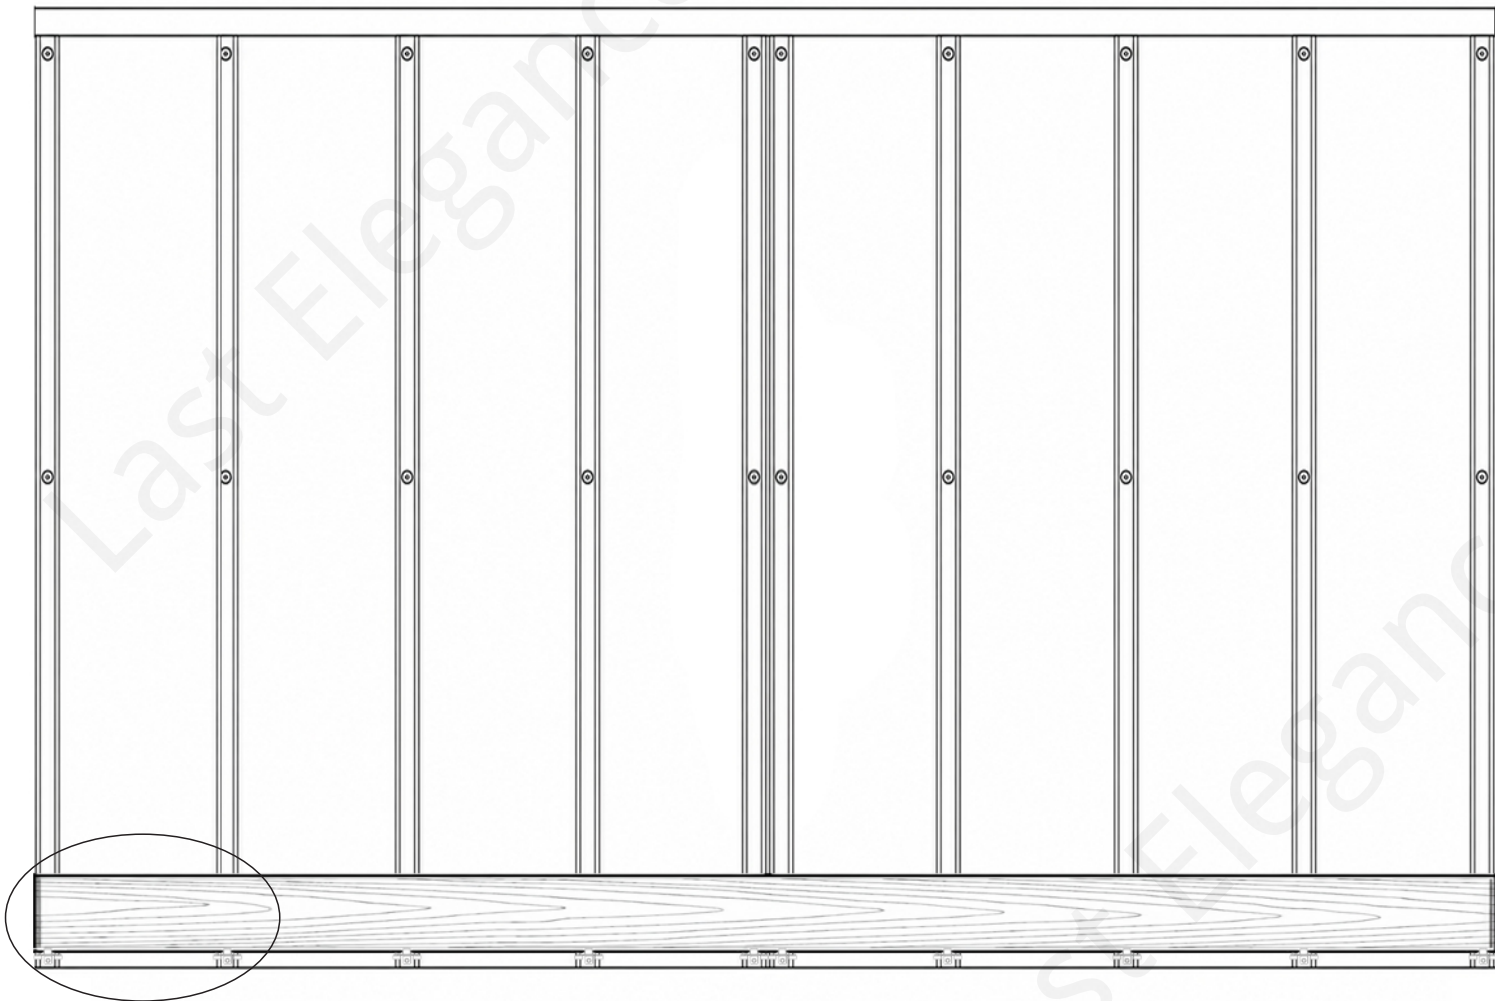



STEP 4

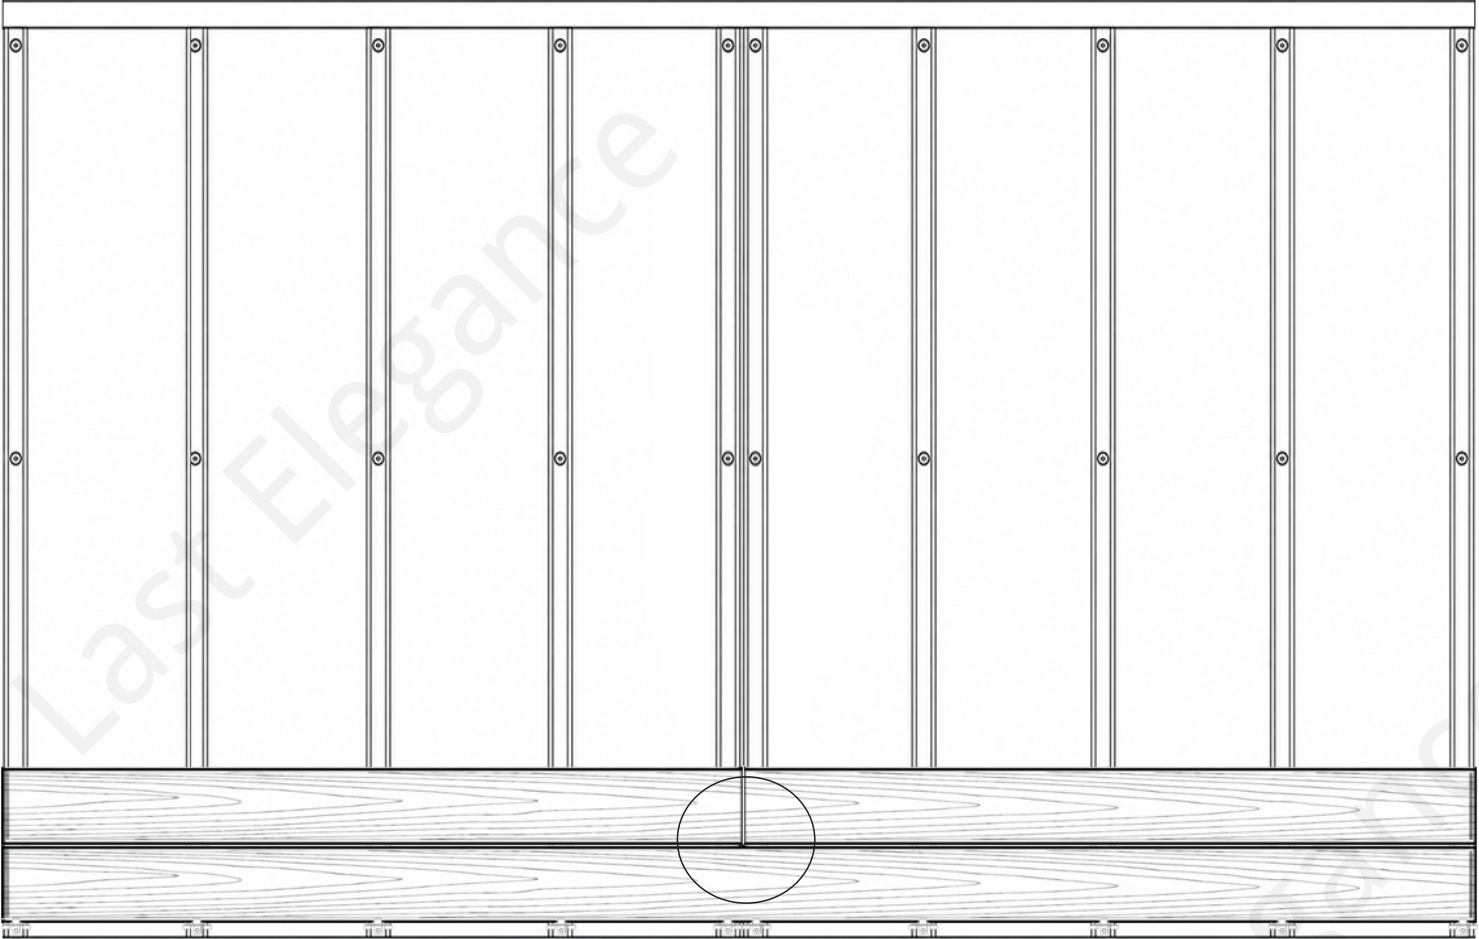



1

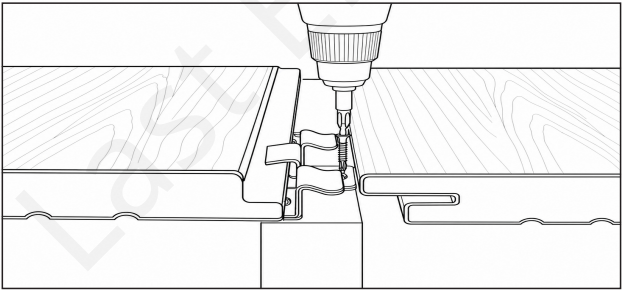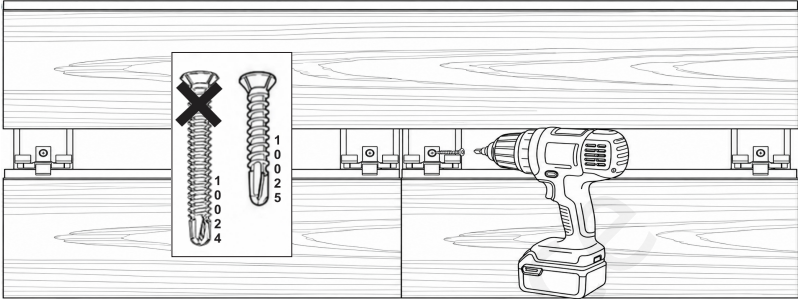

2






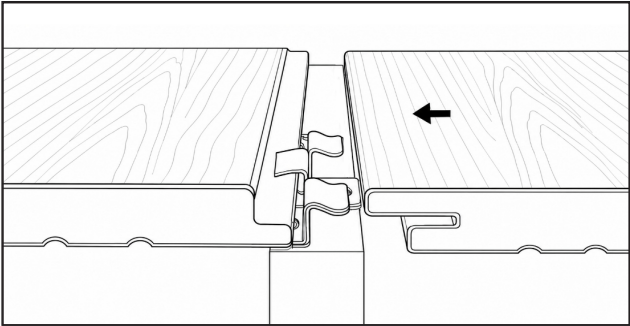
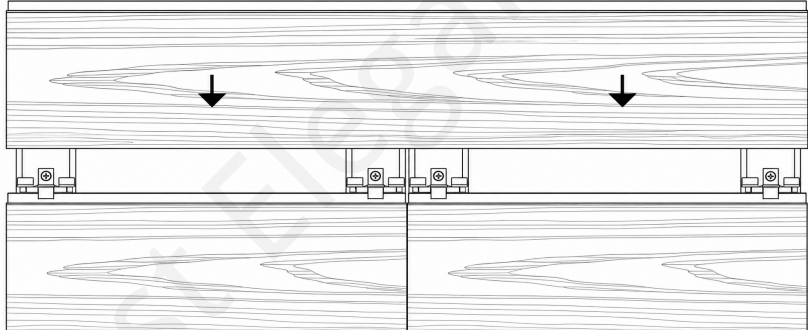


3

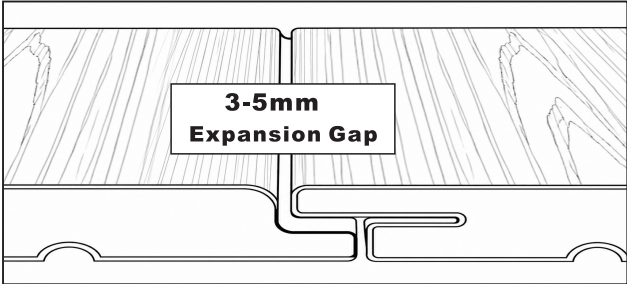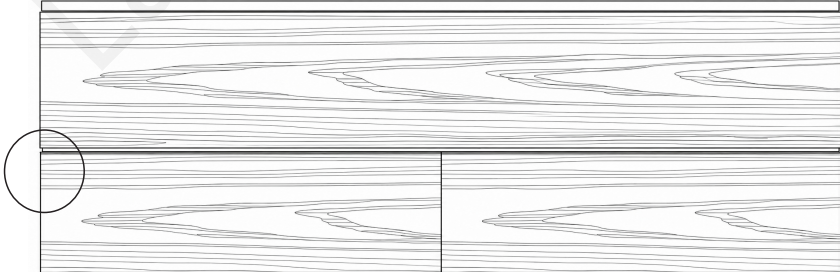


EDGE TRIM — Installation Options


Option 1— Edge trim (WPC)

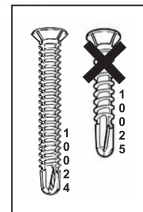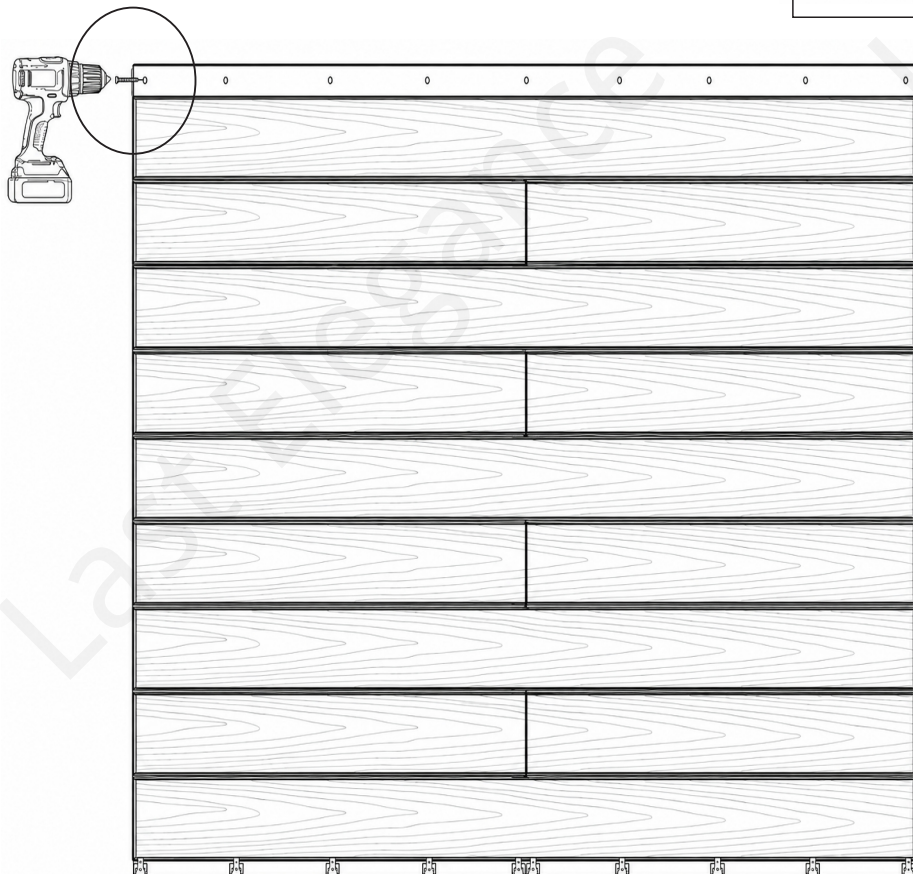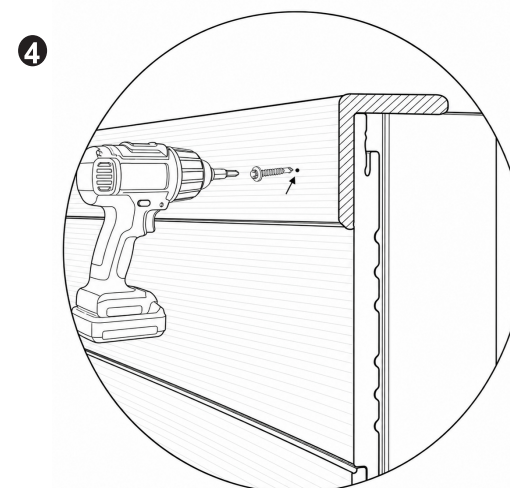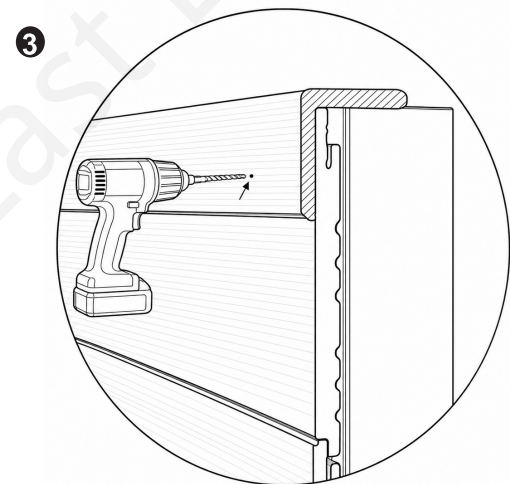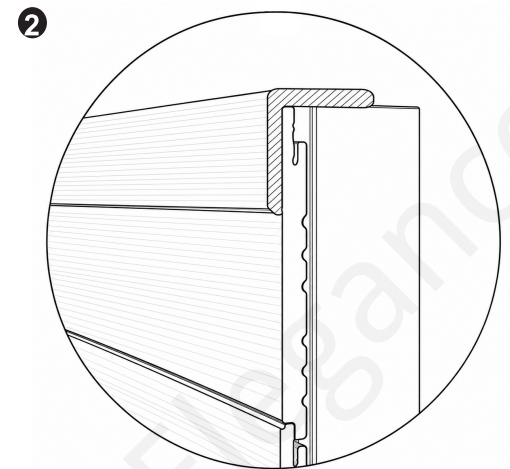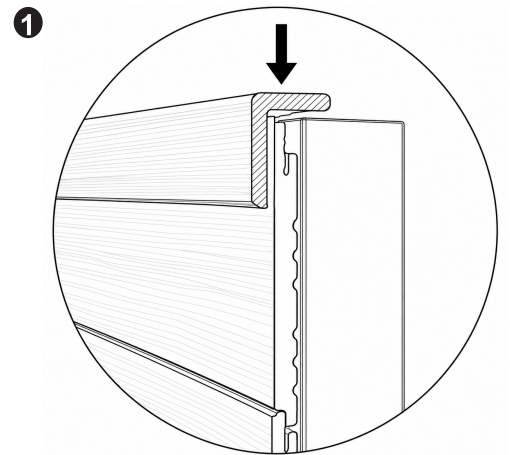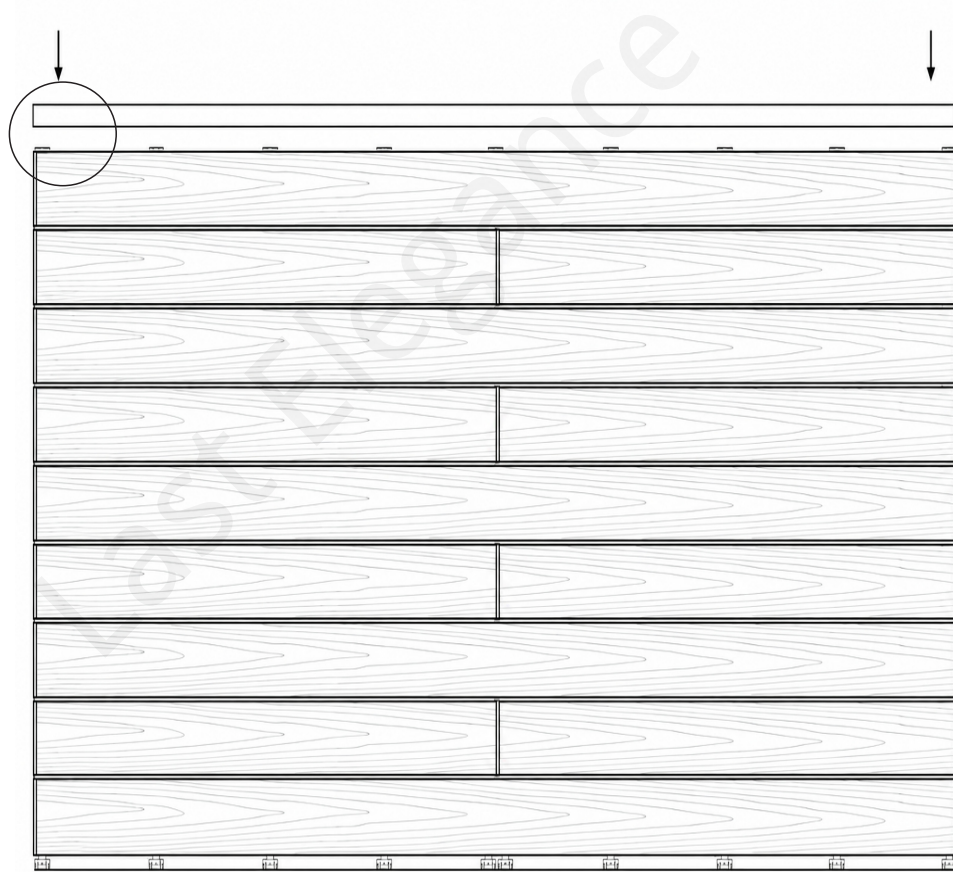


Option 2— Aluminum Edge Trim

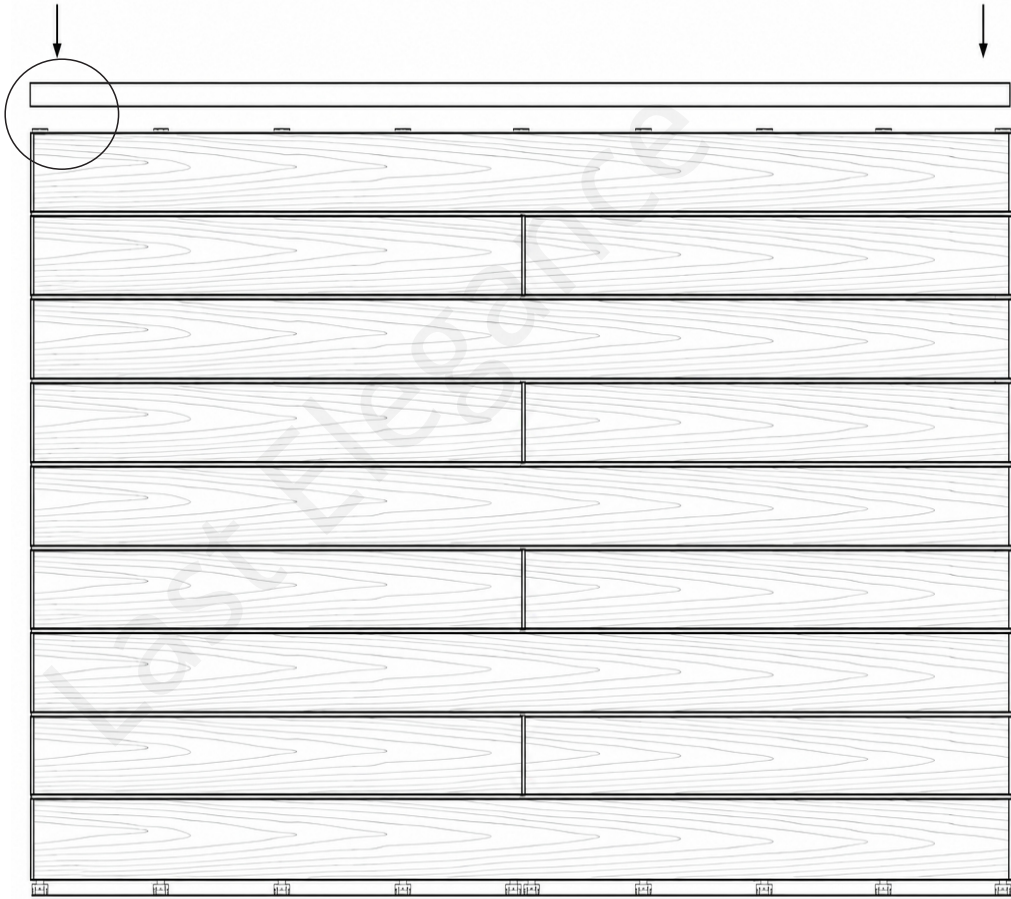

1

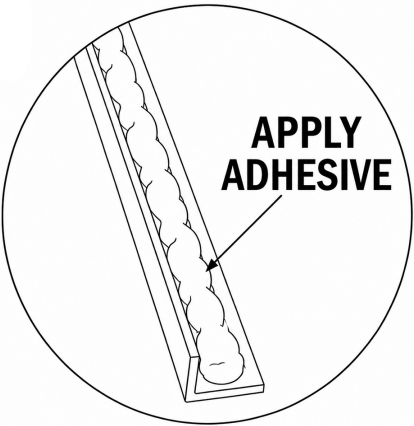

2

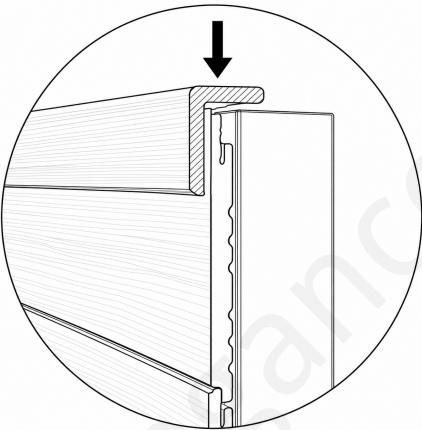



3



SECURE WITH MASKING TAPE




4

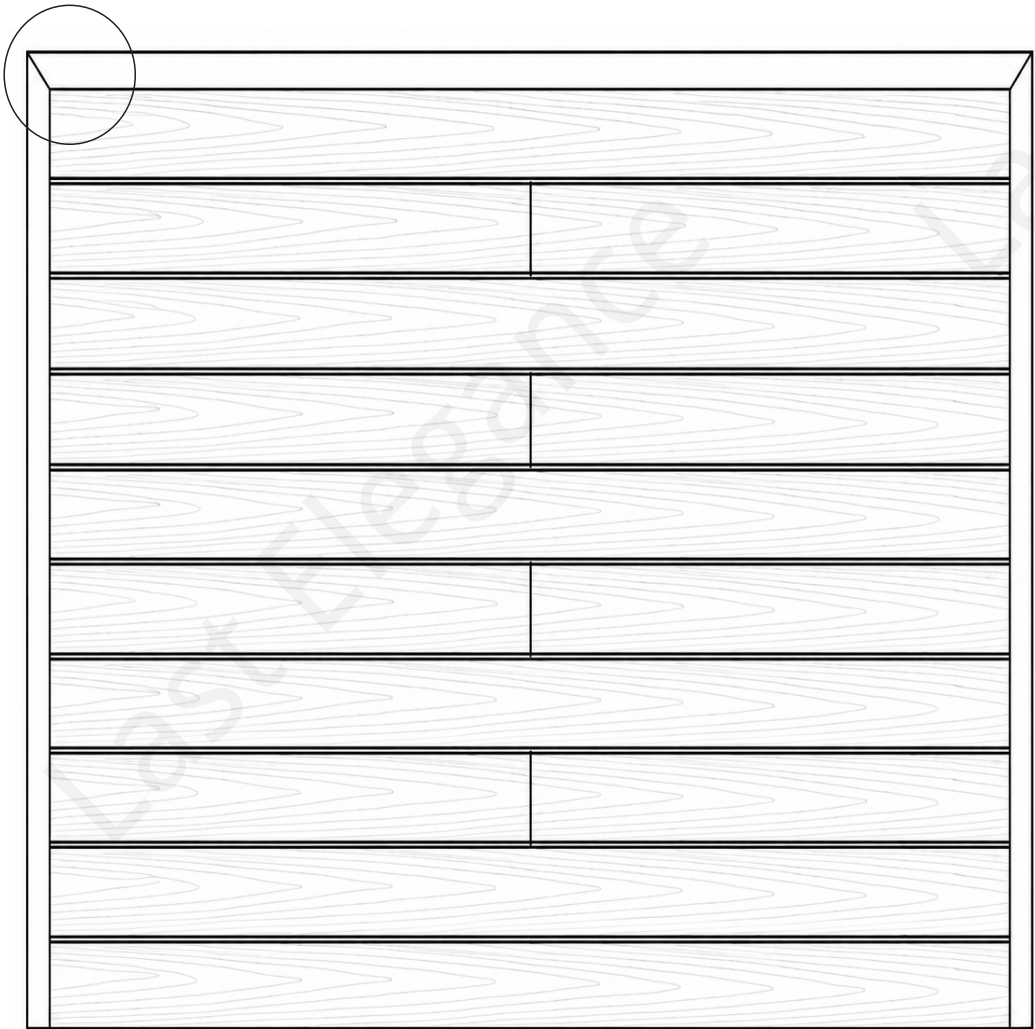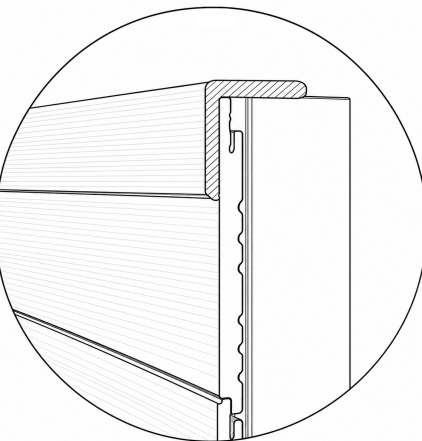


VERTICAL INSTALLATION — PARTS

01 WPC Wall Panel
10021

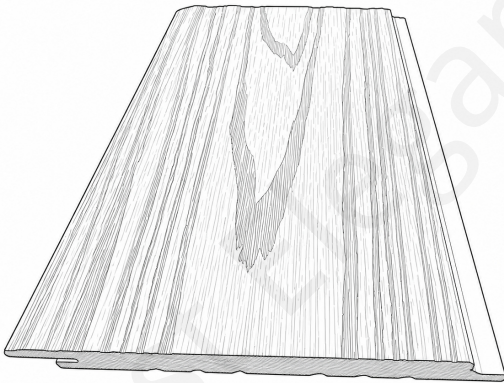


9x

02 Htype clip with thorn
10022

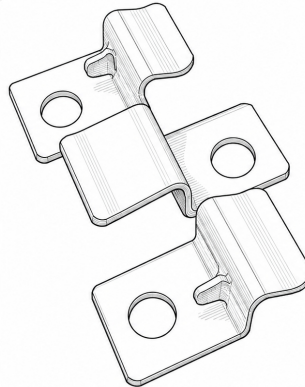

95x

03 Joist
10023

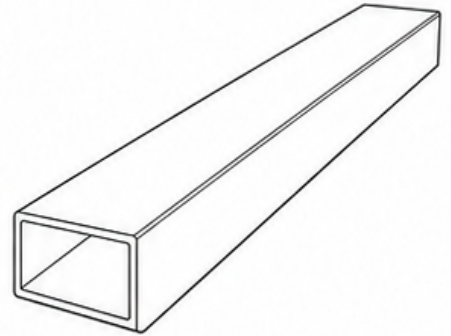

10x

04 Expansion bolt
10111



50x

05 Self-tapping screw
10024




25x

06 Self-tapping screw
10025



95x

07 External corner
10026

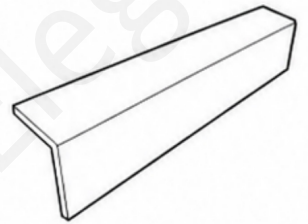


4x

08 Electric drill
10027




1x

09 Spirit level
10028

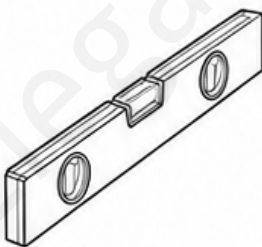

1x

10 Tape measure
10029

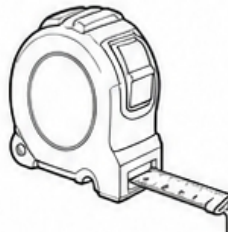


1x

11 Rubber mallet
10030



1x

12 Cutting machine
10031

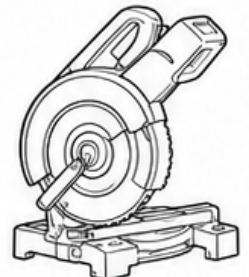

1x



NOTE


Quantities are for reference only.
Actual usage may vary depending
on project size and layout.




TOOLS NEEDED

Ensure all tools are in good working
condition before installation.

STEP 1


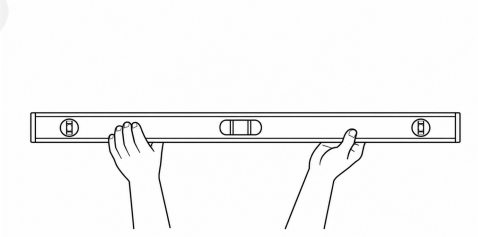


STEP 2

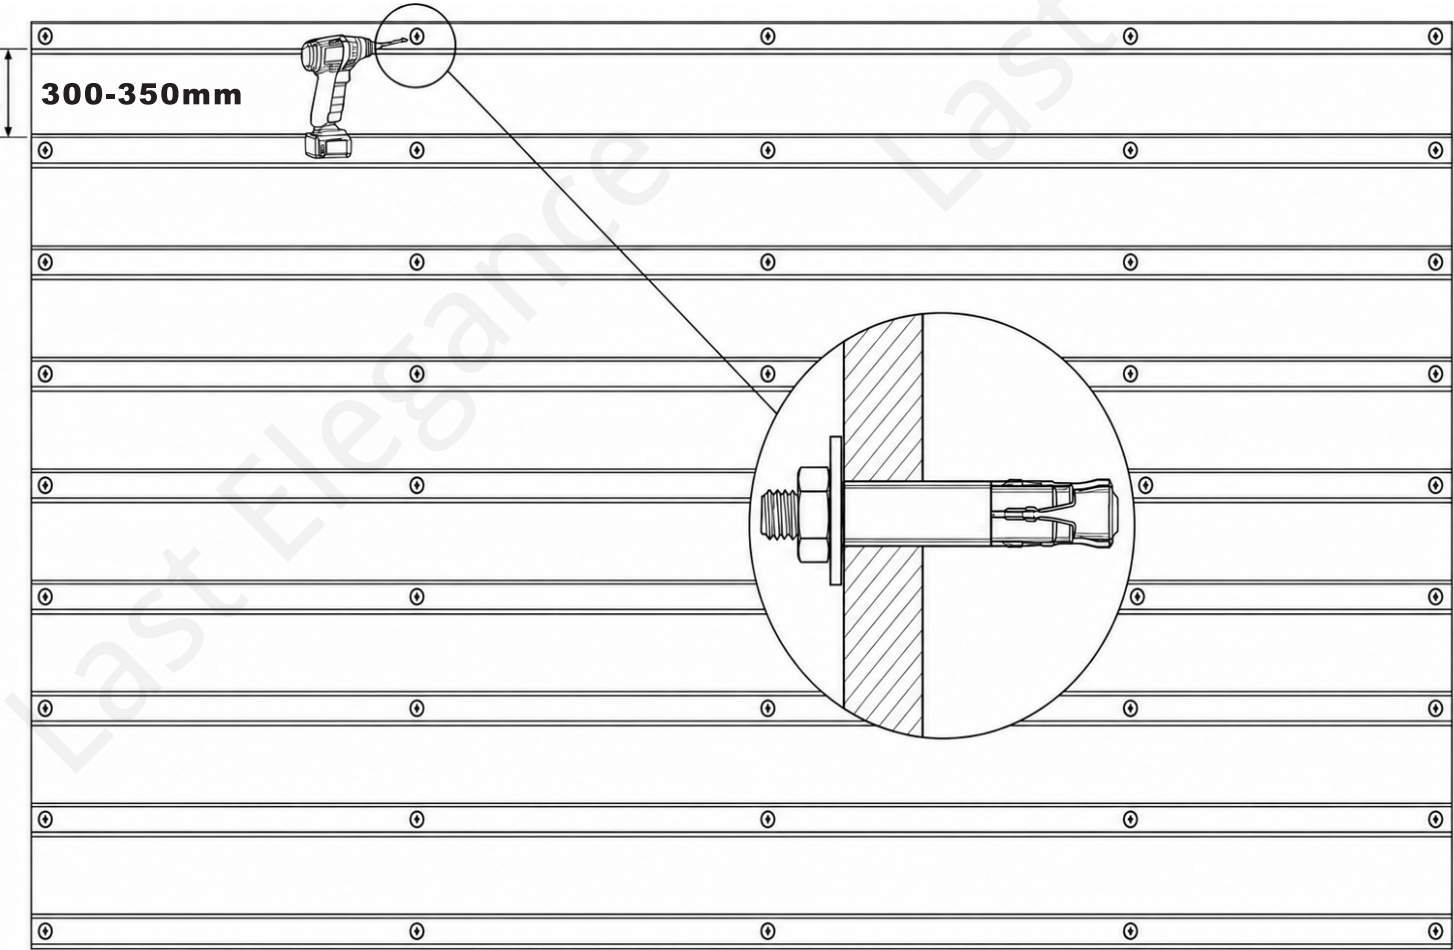


STEP 3 — CUT & FIX THE BOTTOM PANEL



 **CUTTING**
If boards need to be cut to size, ensure the boards are installed and secured immediately after cutting.

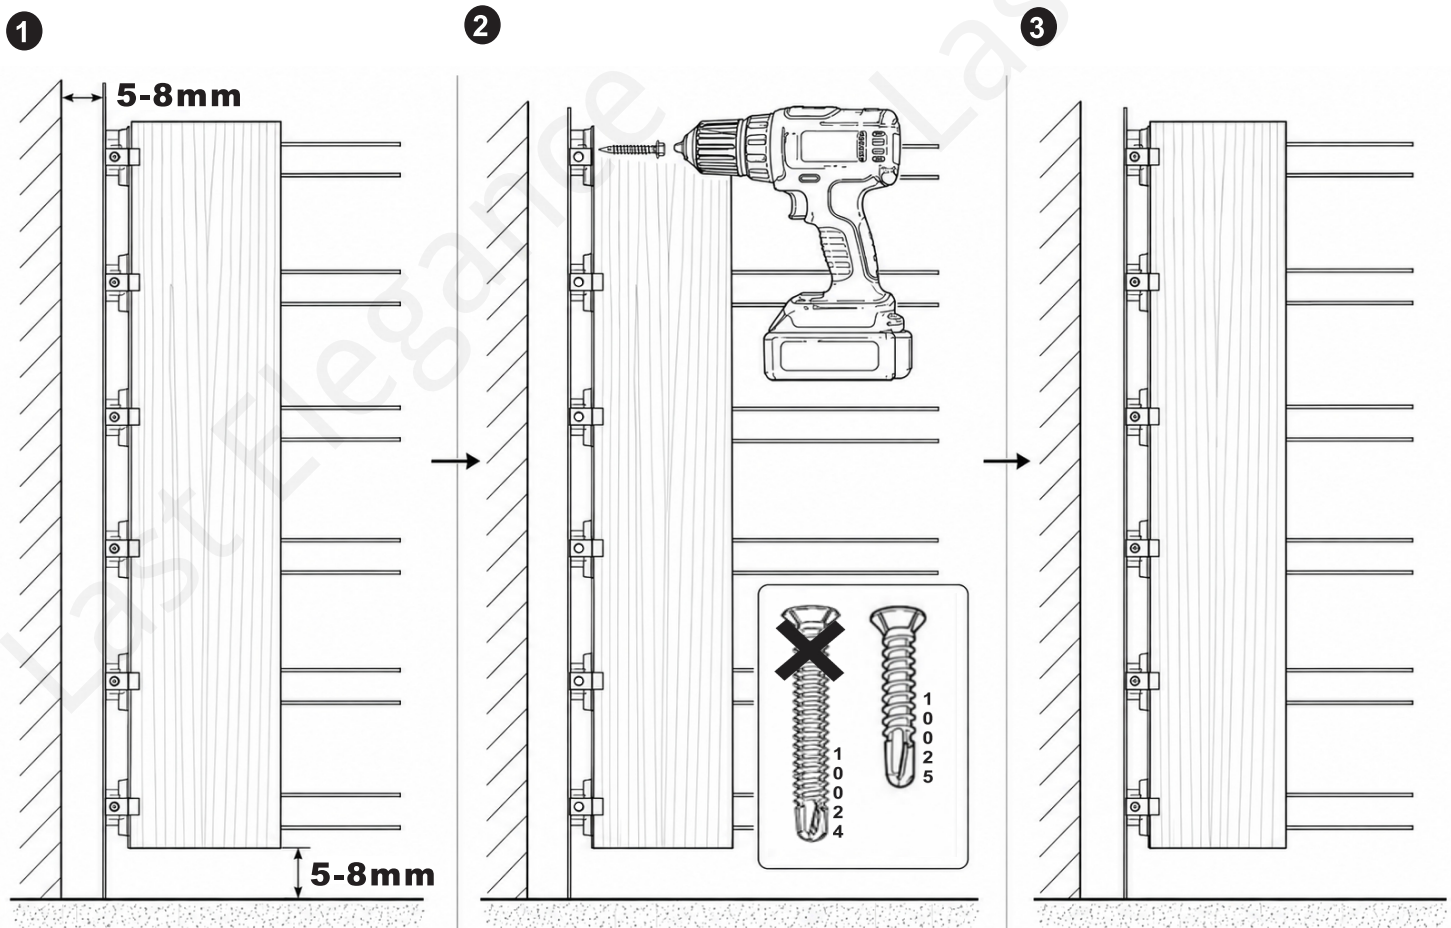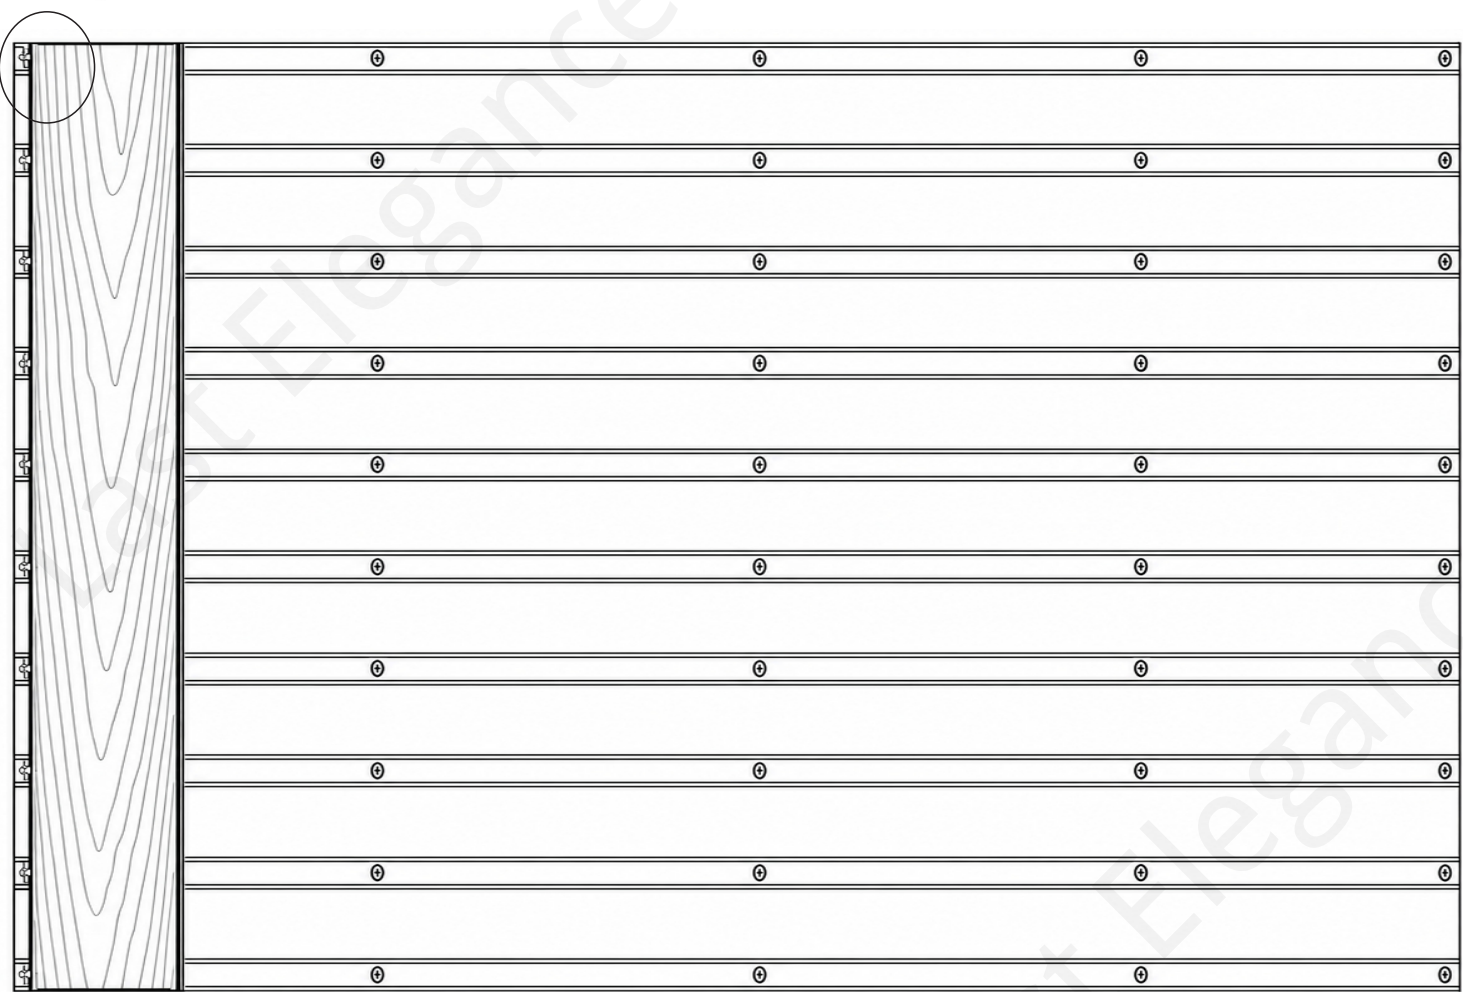



STEP 4

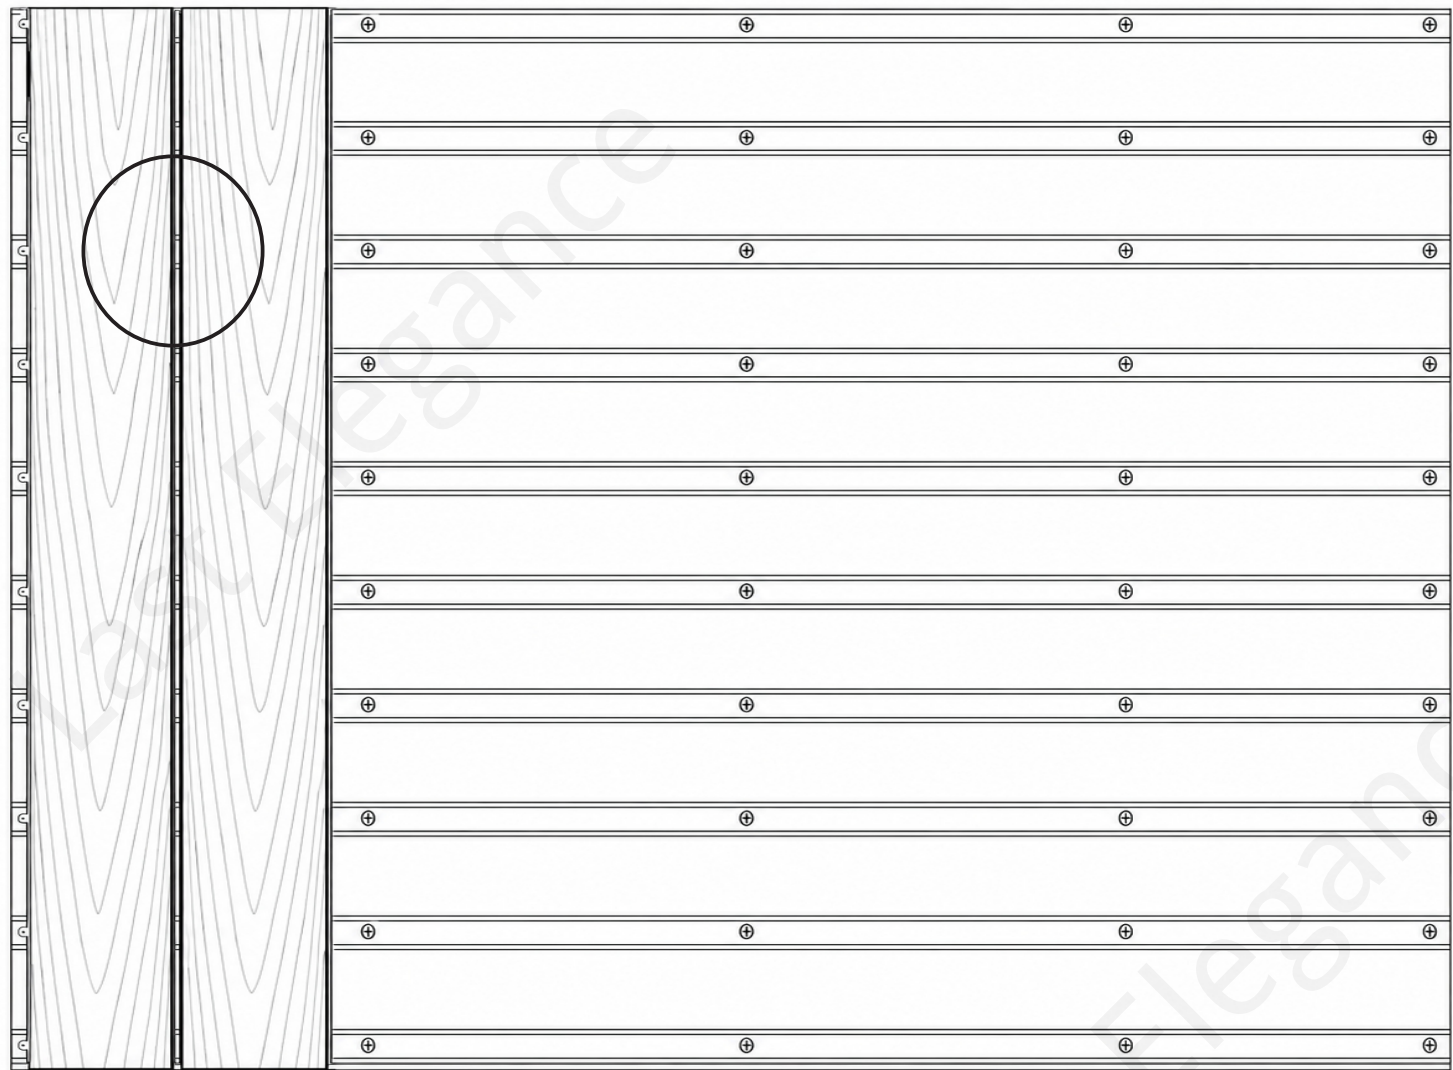



1

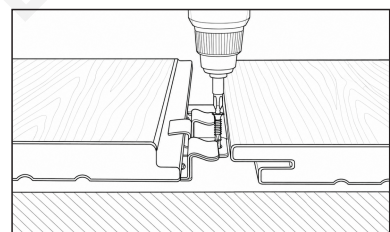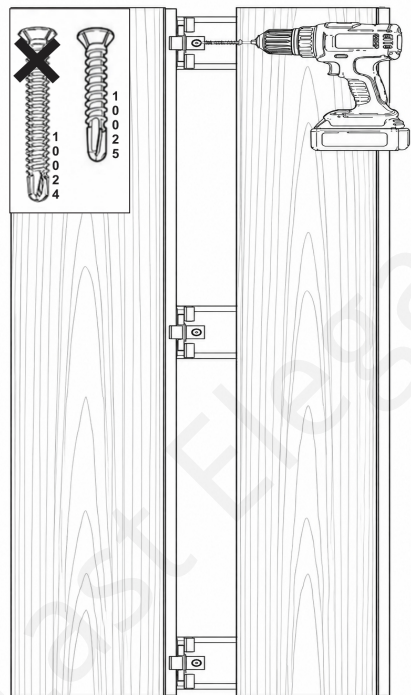

2

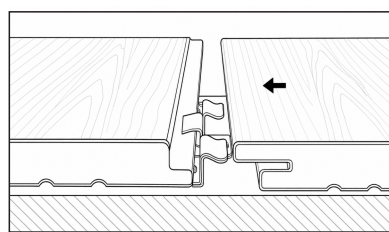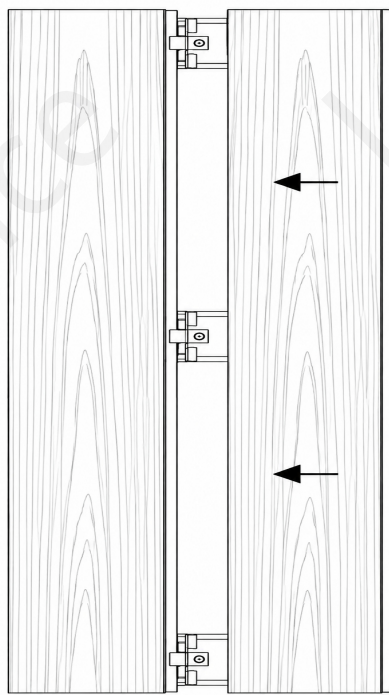


3

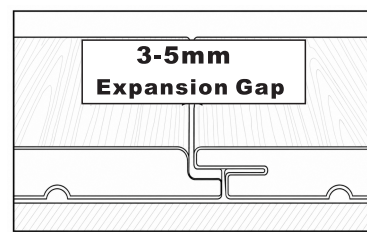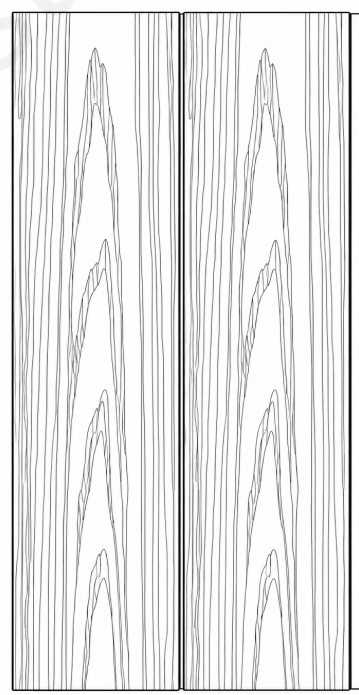


EDGE TRIM — Installation Options


Option 1— Edge trim (WPC)

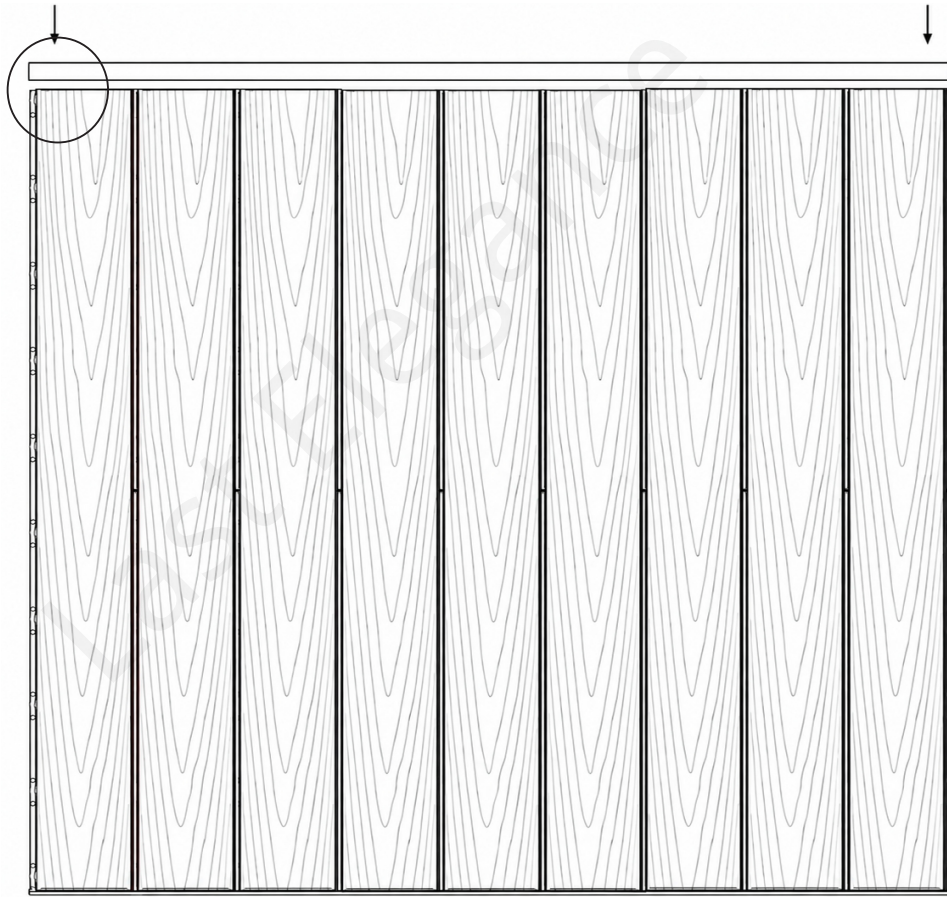


1

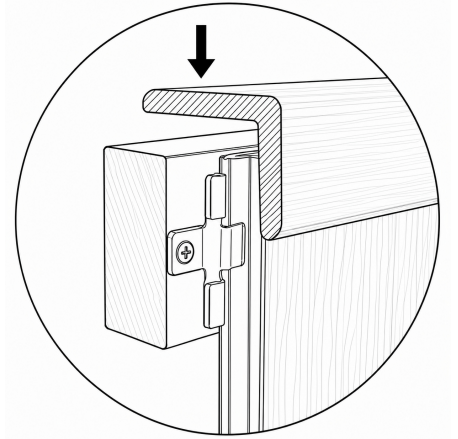




2

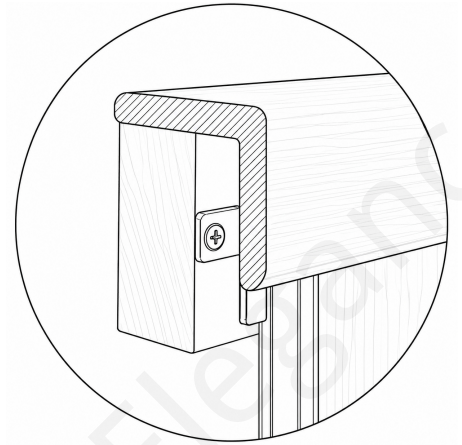



3

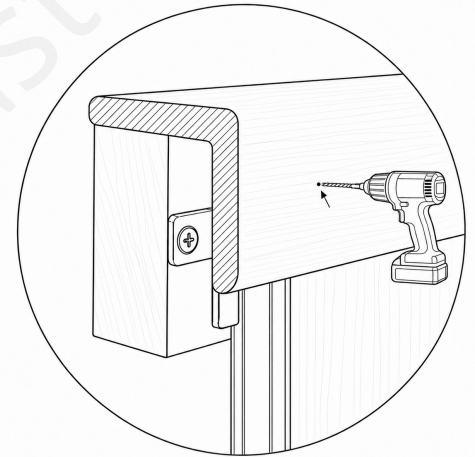


4

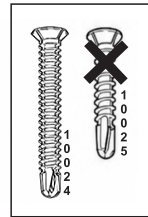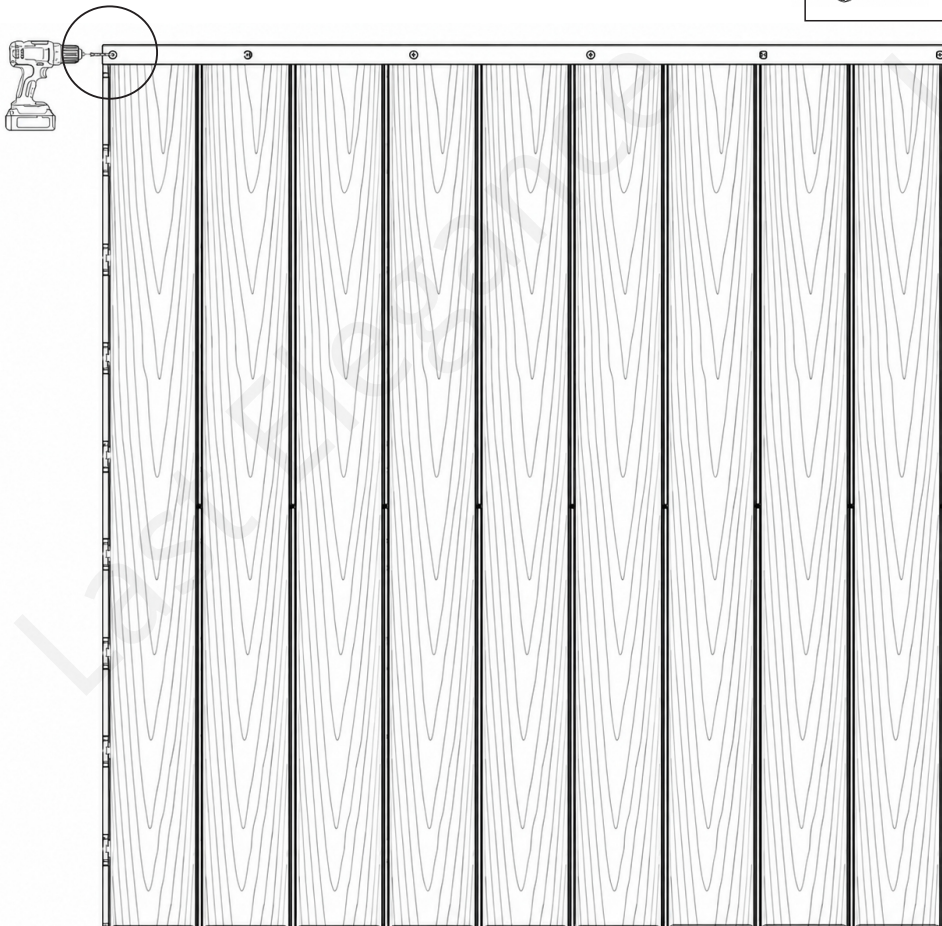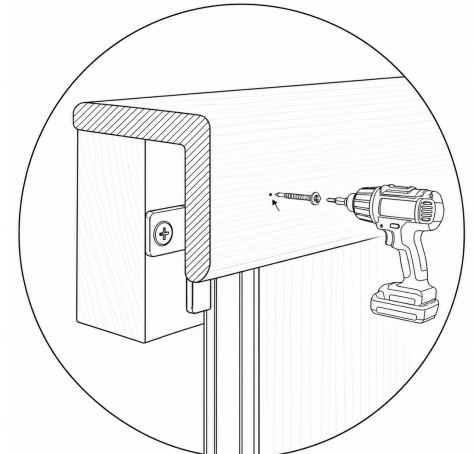


Option 2— Aluminum Edge Trim

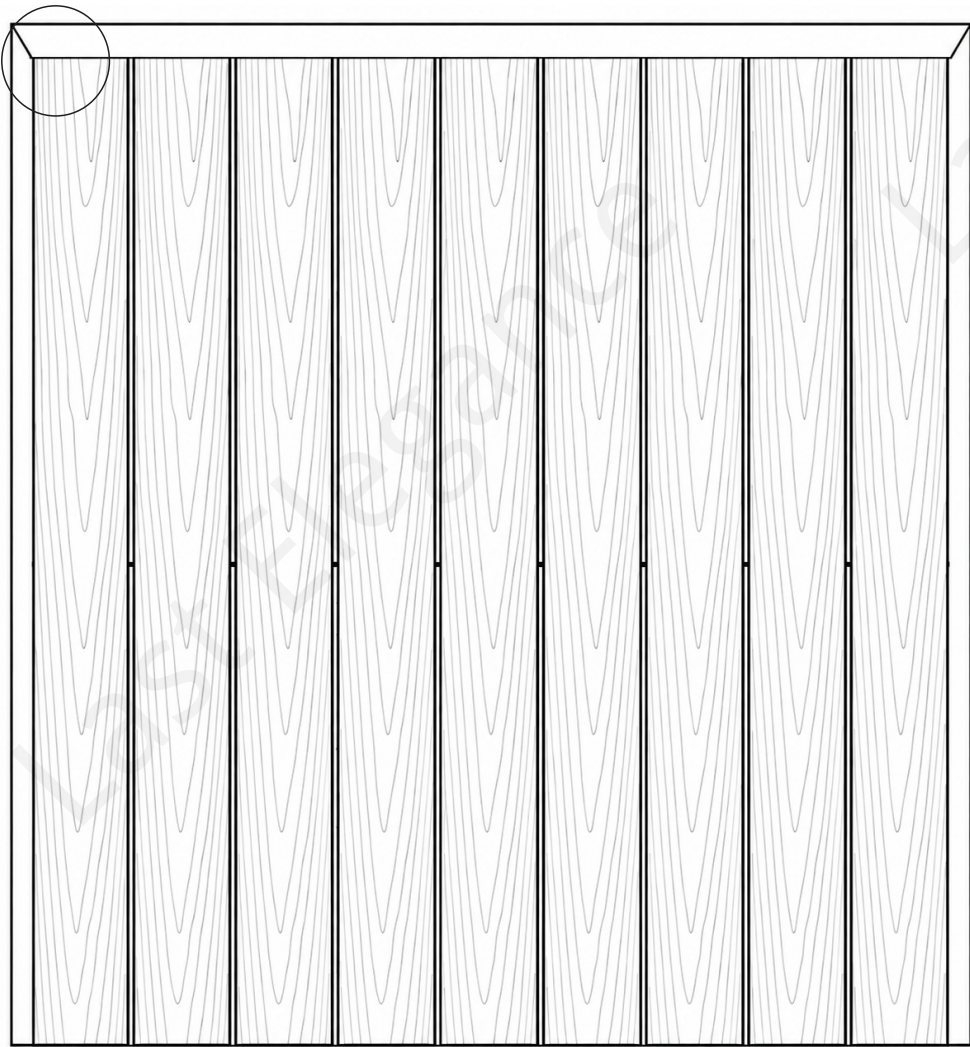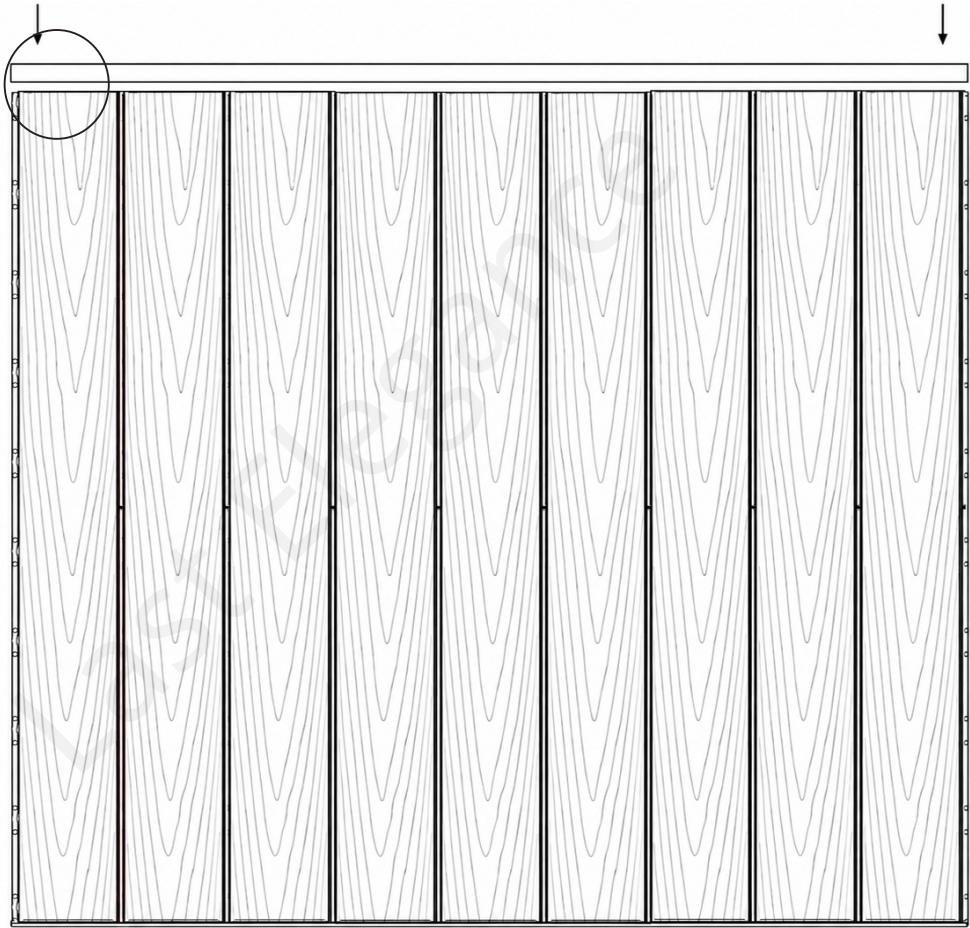

1

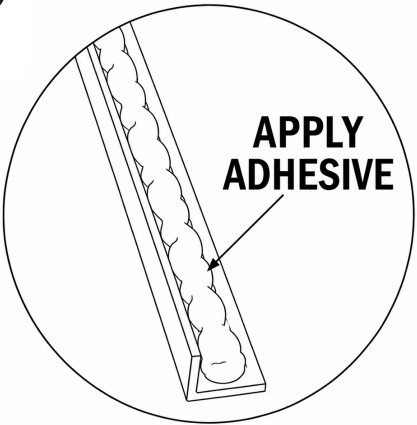

2

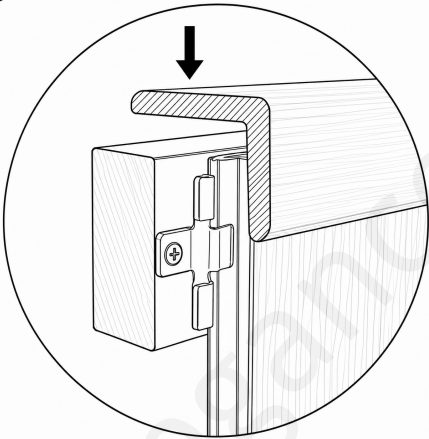

3




REMOVE AFTER
2-3 DAYS

4



4

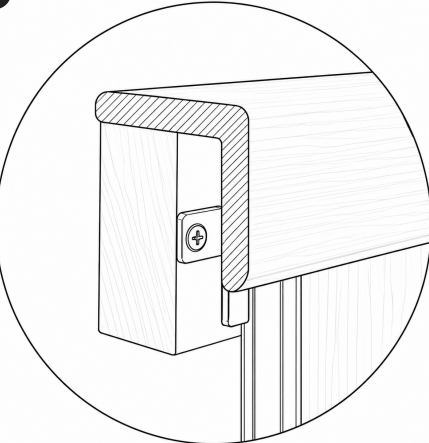



Email: xuan@lastelegance.com



Tel: +86-18581069922



Website: www.lastelegance.com



| Last Elegance

